













## Webbing Straps ...




FERRYMASTERS




Knotted webbing should not be used. A cut lashing should not be joined by knotting.






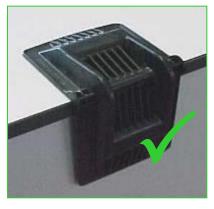

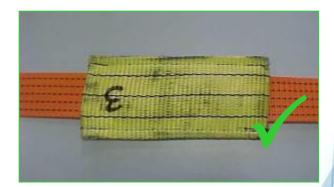



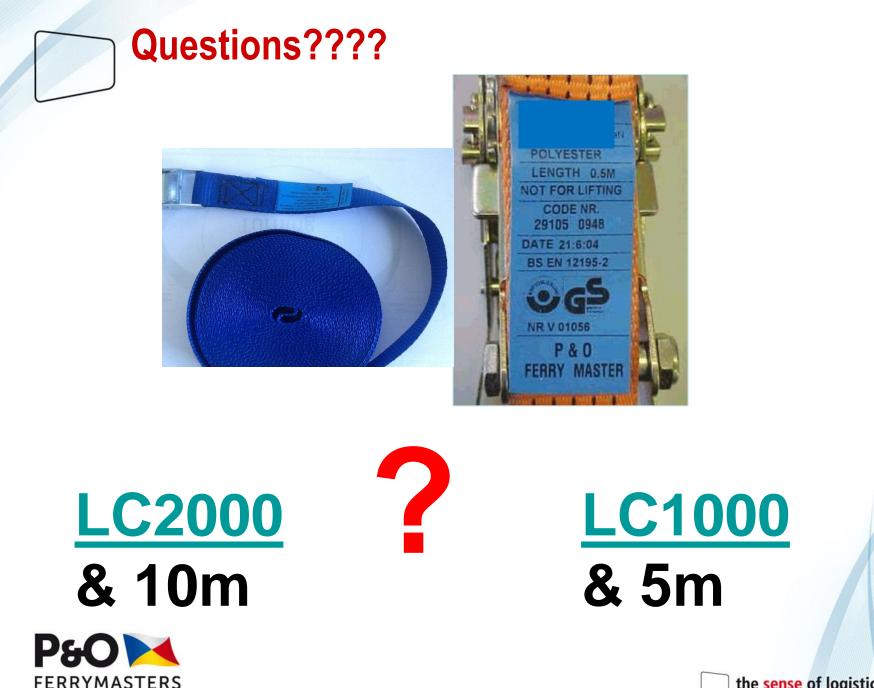



P&O

FERRYMASTERS

Floor Cassettes

10m straps. X 4 over each stack + 1 over middle packs = 13 IN TOTAL



External wall panels on bottom, internal on top

10m straps. X 4 over each stack + 2 over middle packs = 14 IN TOTAL

the sense of logistics

PSO FERRYMASTERS



Mixed load of External wall panels, Loose material and internal wall panels **10m Straps.** 

X 4 over each stack + 2 over middle packs = 14 IN TOTAL









Mixed load of External wall panels, Loose material and internal wall panels

10m Straps. X 3 over each stack + 2 over middle packs =11 IN TOTAL













Mixed load of Roof panels, Apex panels and loose material

10m Straps. X 8 over front stack, 4 over middle and back stacks = 16 IN TOTAL









Mixed load of Roof panels, Apex panels and loose material

10m Straps. X 11 spread over whole load including intermediate layers = 11 IN TOTAL











## Working at height NO CLIMBING













